






VISIONDRIVE VD-3000

Button Key Instruction

Button	Operation
 <p>P button Short Click</p>	<ul style="list-style-type: none"> ◆ Change to Playback mode <ul style="list-style-type: none"> ▶ (While Playback) V button ⇒ Change to a previous file ▶ (While Playback) Tilt the body to right hand side ⇒ Change to a previous file ▶ (While Playback) Tilt the body to left hand side ⇒ Change to a next file ◆ (While Playback) Come back to recording mode
 <p>P button Long Click(3~5sec)</p>	<ul style="list-style-type: none"> ◆ Change to parking mode ◆ Come back to driving mode
 <p>V button Short Click</p>	<ul style="list-style-type: none"> ◆ Recording with LCD Turned-off ◆ Recording with LCD Turned-on
 <p>SHOT button Short Click</p>	<ul style="list-style-type: none"> ◆ Manual (Event) file recording
 <p>SHOT button Long Click(3~5sec)</p>	<ul style="list-style-type: none"> ◆ Audio recording off ◆ Come back to audio recording

- ※ To securely pick out the SD card from the body, please wait for 10~20 seconds after you turn off the power.
- ※ For secure usage, do not copy other files into the SD card of Vision Drive.